

STRATA VW Wall Installation


Direct Install with Screws

Acoustical Wall Panels

These installation suggestions consist of a common process for Strata VW installation. Installers should rely upon their own professional experience and understanding of their unique requirements to ensure a successful install.

Strata VW will look best when installed with no gaps between ends or rows.


Tools You Will Need

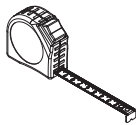


Tape Measure



Pencil

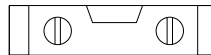


Level

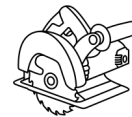

Circular Saw



Utility Knife
w/ sharp blade

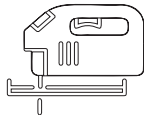

Jigsaw
(hole cutter)

Materials You Will Need



Masking Tape



Furring Strips
(7/8" or 2" thickness recommended)



Wall Anchor Plugs
(Optional) for Concrete Walls



1.25"
Black Drywall Screws




.5" Screws

STRATA VW Wall Installation

Direct Install with Screws

Acoustical Wall Panels

1. Start by preparing the wall. Clean the wall and remove any screws, nails or other obstacles. Measure the dimensions of the wall.

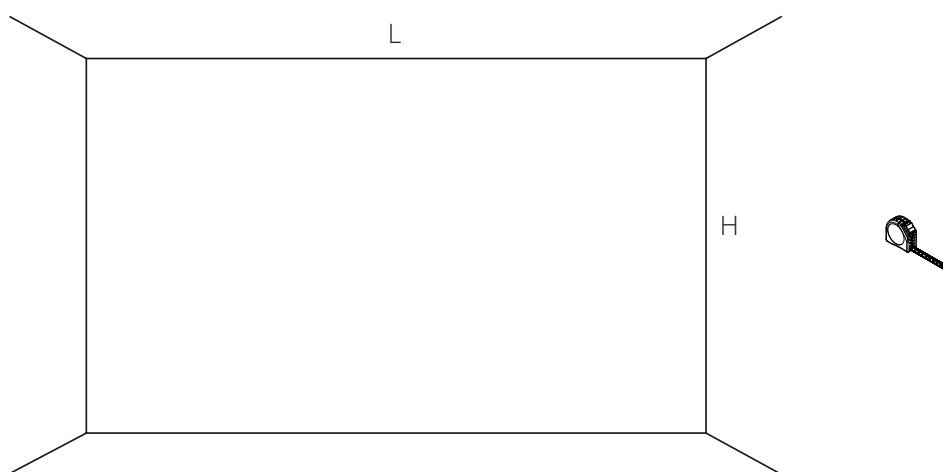


STRATA VW Wall Installation

Direct Install with Screws

Acoustical Wall Panels

2. Position and secure Strata VW on the wall with screws, placing them approximately every 16" to 24".

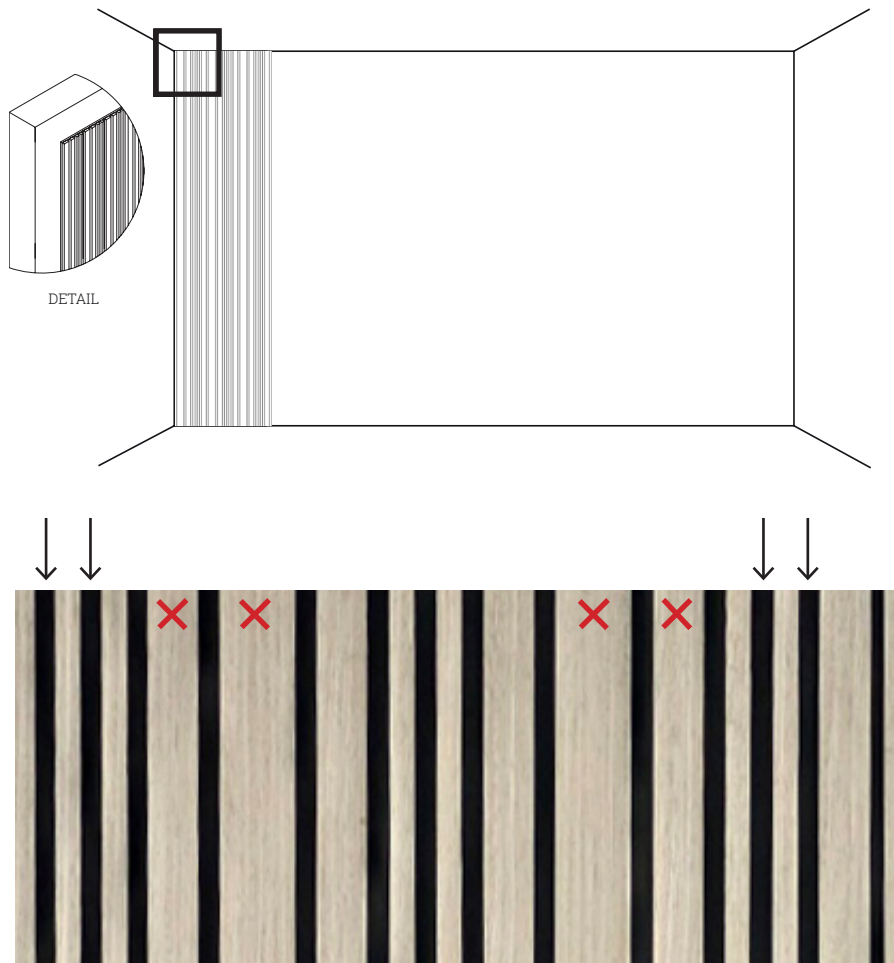


NOTE: DO NOT place screws on the wooden portion of Strata VW.
Only place on the PET felt portion in between wooden strips.


STRATA VW Wall Installation Direct Install with Screws

Acoustical Wall Panels

3. Cut excess material to fit the wall or accommodate obstacles, if necessary. When cutting through PET, use a box knife. When cutting through wood veneer, use a jigsaw. Use masking tape to prevent splintering or splitting.

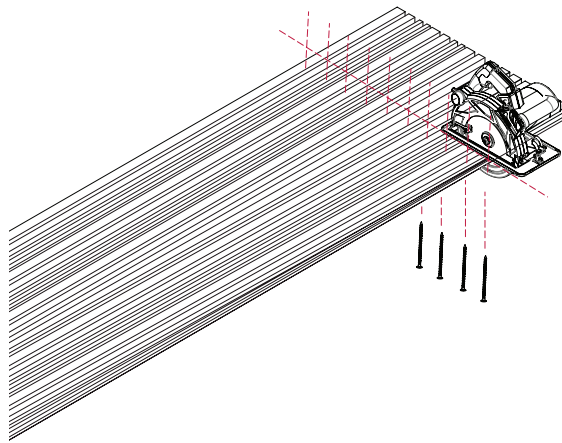

After cuts are made, reattach the wooden slats to PET backing with .5" screws, working from the backside of the panel.

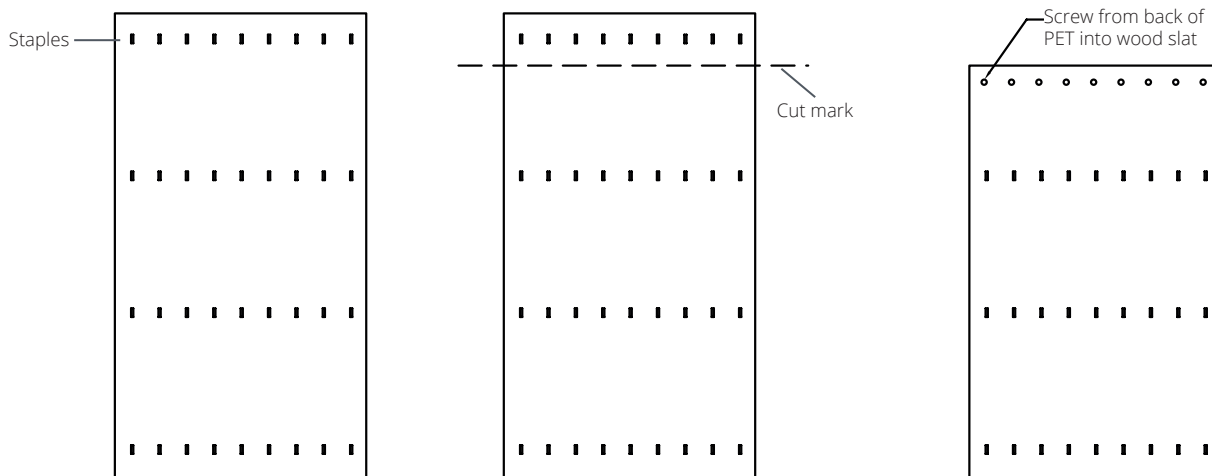


STRATA VW Wall Installation

Direct Install with Screws

Acoustical Wall Panels

4. Repeat the process to install the rest of Strata VW to the wall. Strata VW will look best when installed with no gaps between ends or rows.

TIP: Spray paint electrical cover and the surrounding wall black prior to install to match.

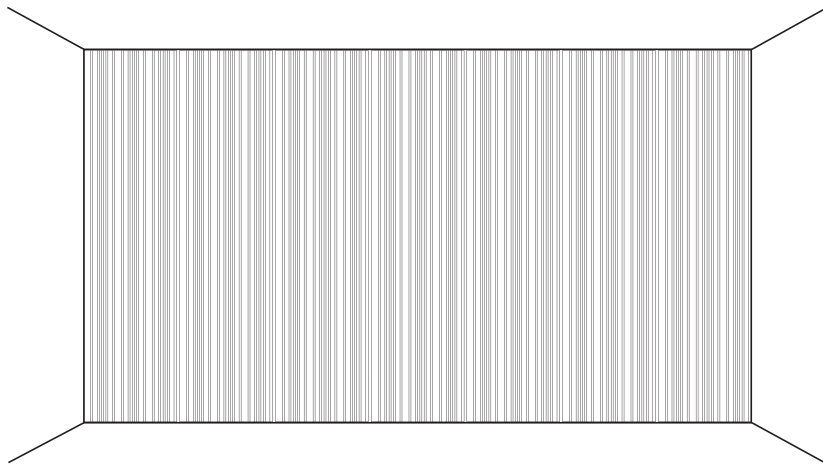


STRATA VW Wall Installation with Furring Strips

Acoustical Wall Panels

These installation suggestions consist of a common process for Strata VW installation. Installers should rely upon their own professional experience and understanding of their unique requirements to ensure a successful install.

Strata VW will look best when installed with no gaps between ends or rows.


Tools You Will Need

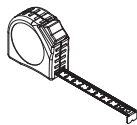


Tape Measure



Pencil




Level

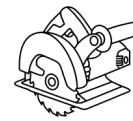

Circular Saw




Utility Knife
w/ sharp blade



Jigsaw
(hole cutter)

Materials You Will Need




Masking Tape



Furring Strips
(7/8" or 2" thickness recommended)



Wall Anchor Plugs
(Optional) for Concrete Walls



1.25"
Black Drywall Screws




.5" Screws


STRATA VW Wall Installation with Furring Strips

Acoustical Wall Panels

1. Start by preparing the wall. Clean the wall and remove any screws, nails or other obstacles. Measure the dimensions of the wall.

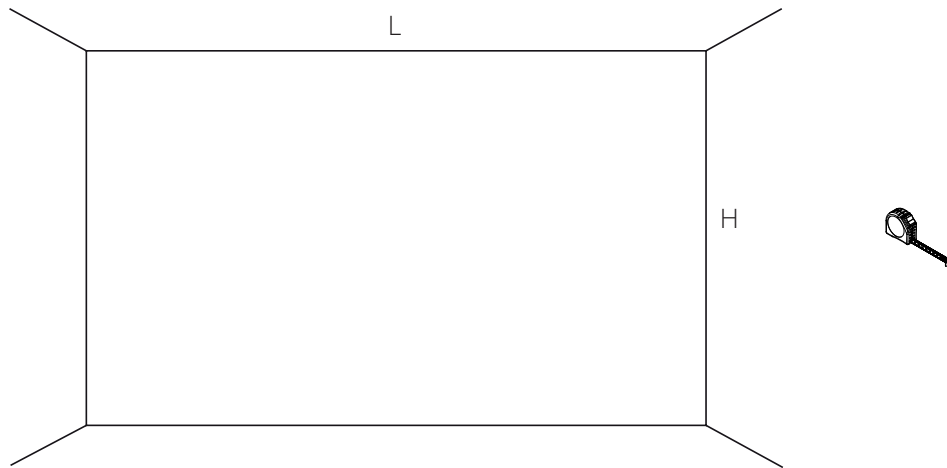



2. Create a framework by evenly spacing furring strips on the wall. The framework should point the opposite way of the Strata VW direction. NOTE: The thicker the furring strips, the larger the air cavity, therefore increased sound absorption.

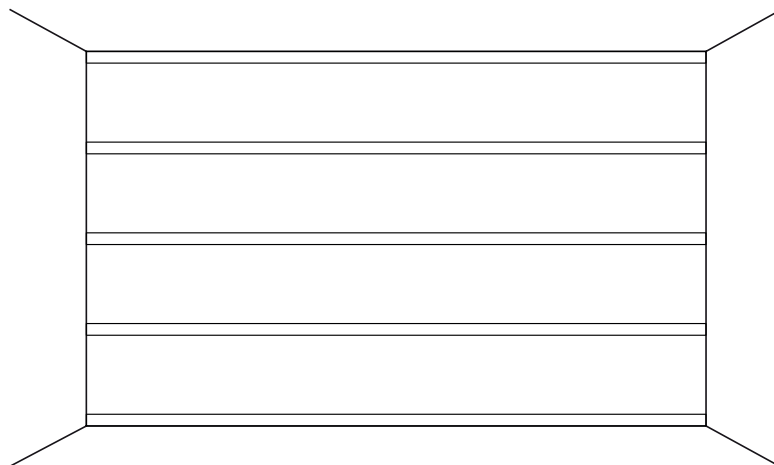

STRATA VW Wall Installation with Furring Strips

Acoustical Wall Panels

3. Position and secure Strata VW on the wall with screws, placing them approximately every 16" to 24".

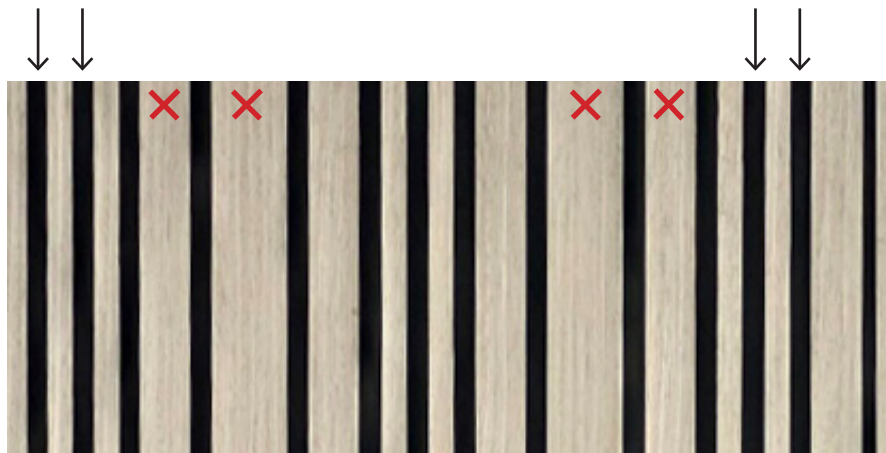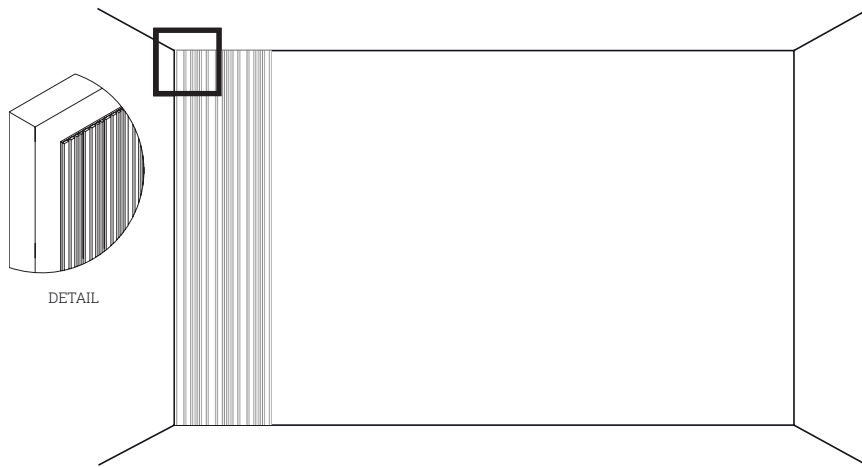


NOTE: DO NOT place screws on the wooden portion of Strata VW.
Only place on the PET felt portion in between wooden strips.


STRATA VW Wall Installation with Furring Strips

Acoustical Wall Panels

4. Cut excess material to fit the wall or accommodate obstacles, if necessary. When cutting through PET, use a box knife. When cutting through wood veneer, use a jigsaw. Use masking tape to prevent splintering or splitting.

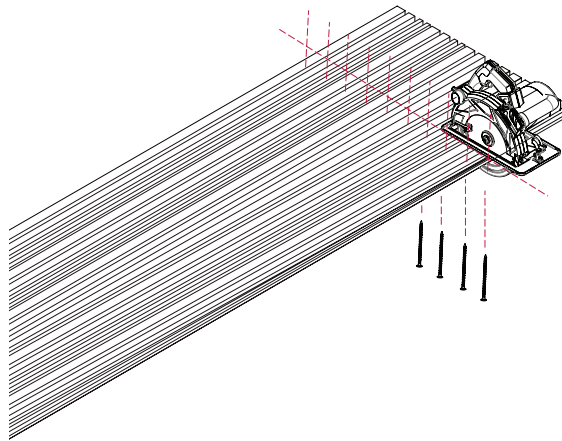

After cuts are made, reattach the wooden slats to PET backing with .5" screws, working from the backside of the panel.

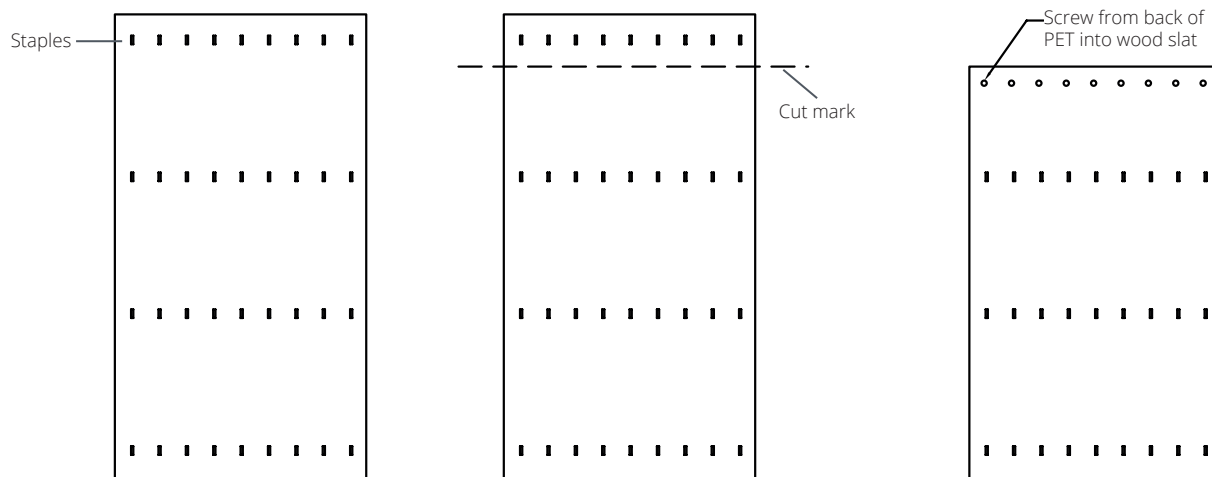


STRATA VW Wall Installation with Furring Strips

Acoustical Wall Panels

5. Repeat the process to install the rest of Strata VW to the wall. Strata VW will look best when installed with no gaps between ends or rows.

TIP: Spray paint electrical cover and the surrounding wall black prior to install to match.

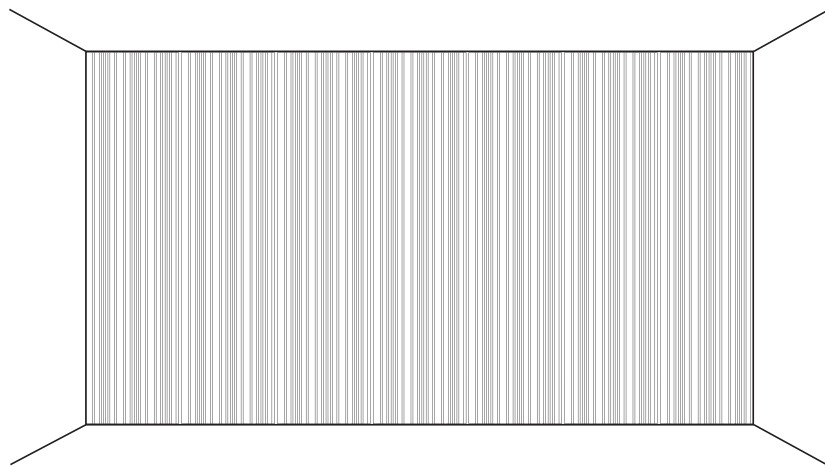

STRATA VW Wall Installation


Direct Install with Adhesive

Acoustical Wall Panels

These installation suggestions consist of a common process for Strata VW installation. Installers should rely upon their own professional experience and understanding of their unique requirements to ensure a successful install.

Strata VW will look best when installed with no gaps between ends or rows.


Tools You Will Need

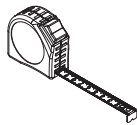


Tape Measure



Pencil




Level



Circular Saw




Utility Knife
w/ sharp blade



Jigsaw
(hole cutter)

Materials You Will Need



Masking Tape



Nail Gun



Finishing Nails



Pliers




Liquid Nail
or
3095 Carpet Glue
Adhesive

STRATA VW Wall Installation


Direct Install with Adhesive

Acoustical Wall Panels

1. Start by preparing the wall. Clean the wall and remove any screws, nails or other obstacles. Measure the dimensions of the wall.

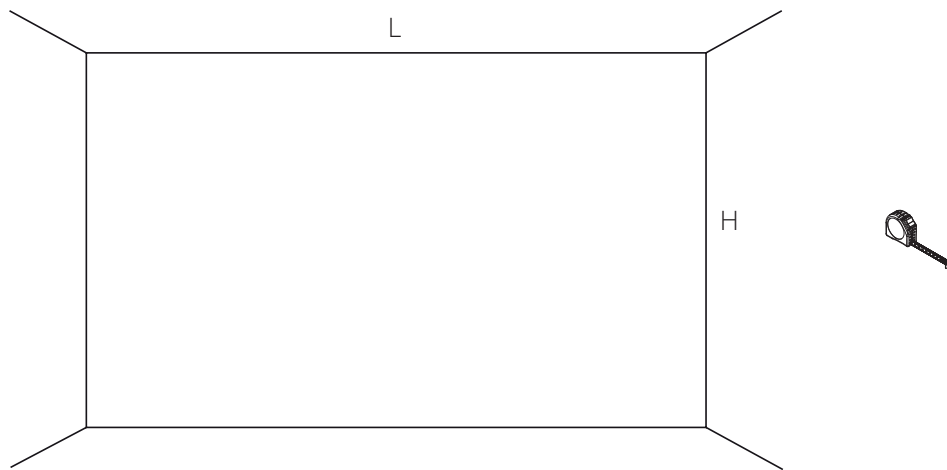

2. Lay each panel of Strata VW on the ground and flip over with the wood side down. Apply adhesive to one panel at a time. Adhesive typically has 20-25 minutes of working time.

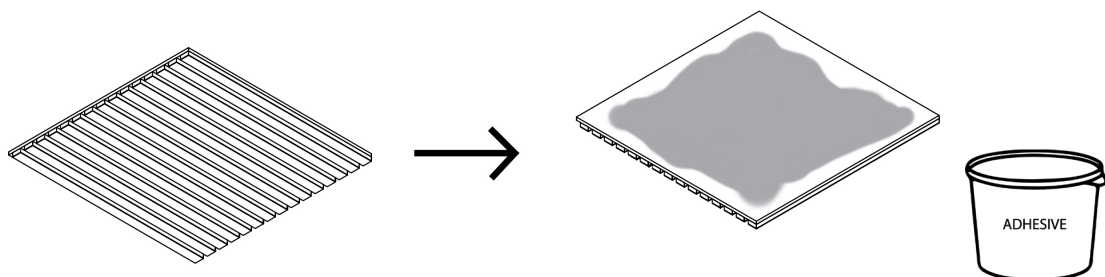


STRATA VW Wall Installation


Direct Install with Adhesive

Acoustical Wall Panels

3. Position Strata VW on the wall.

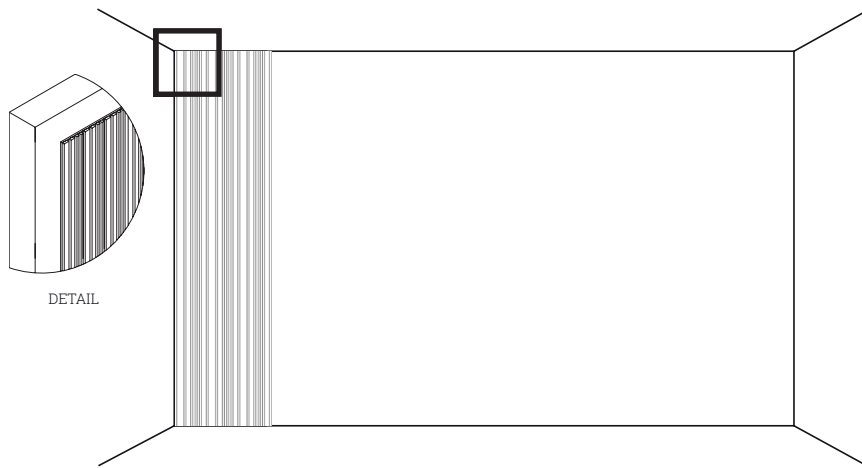

4. Use a nail gun to put finishing nails on the four corners to hold the Strata VW securely to the wall until the adhesive is dry.

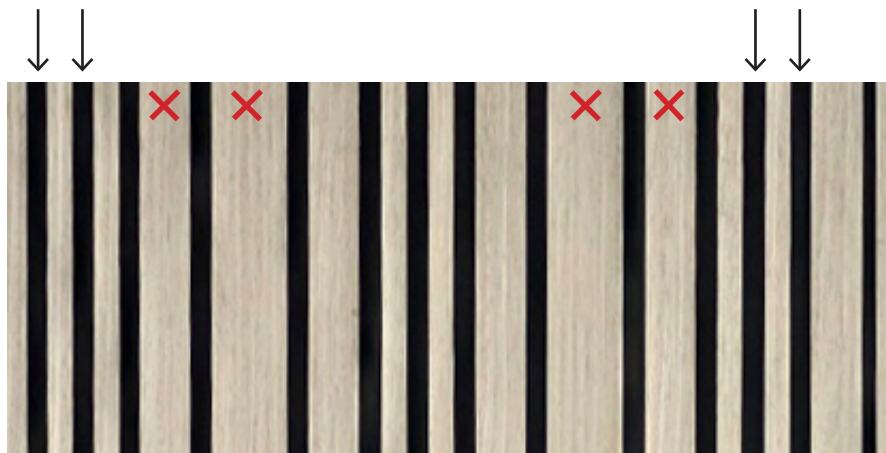


NOTE: DO NOT place screws on the wooden portion of Strata VW.
Only place on the PET felt portion in between wooden strips.


STRATA VW Wall Installation Direct Install with Adhesive

Acoustical Wall Panels

5. Cut excess material to fit the wall or accommodate obstacles, if necessary. When cutting through PET, use a box knife. When cutting through wood veneer, use a jigsaw. Use masking tape to prevent splintering or splitting.

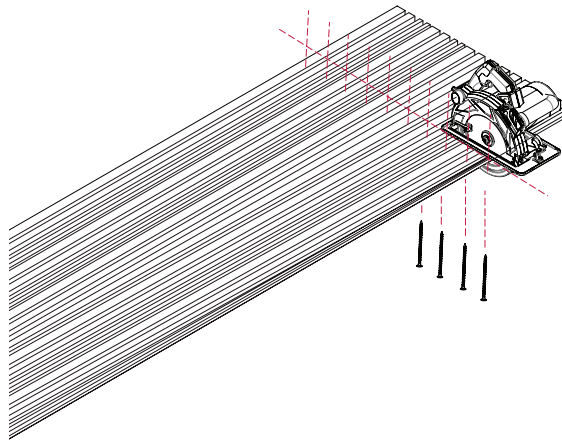

After cuts are made, reattach the wooden slats to PET backing with .5" screws, working from the backside of the panel.

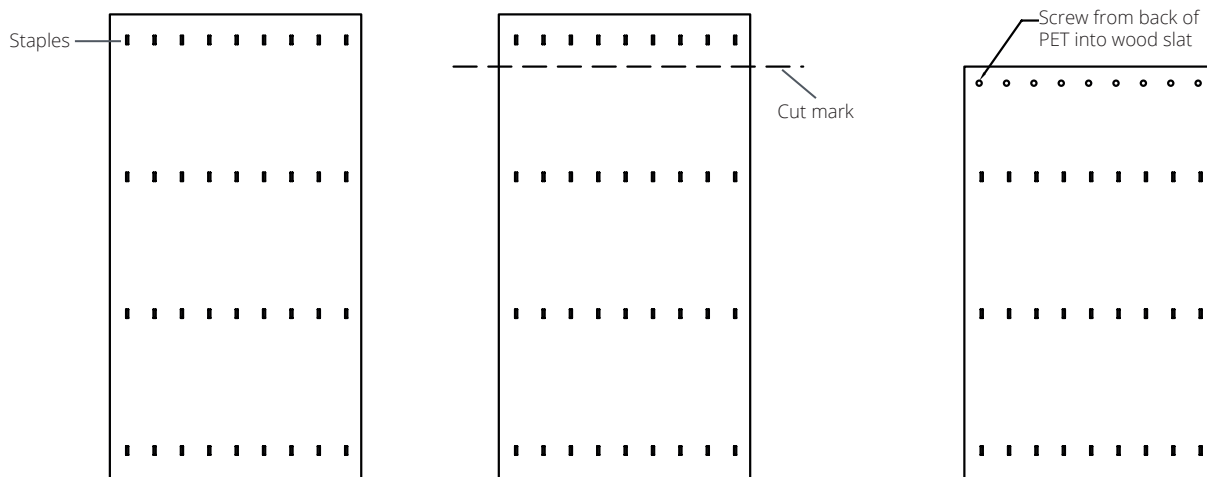

STRATA VW Wall Installation

Direct Install with Adhesive

Acoustical Wall Panels

6. Repeat the process to install the rest of Strata VW to the wall. Strata VW will look best when installed with no gaps between ends or rows.

TIP: Spray paint electrical cover and the surrounding wall black prior to install to match.



7. Once adhesive has dried, use pliers to remove finishing nails.

