


DIVI INSTALLATION

SÖFWAL DIVI

SÖFWAL Desk Dividers provide privacy and acoustic control in shared work and educational spaces. Create a sense of privacy and separation from desk-to-desk. The patent pending Conecta proprietary hardware and side table clamp provide quick and easy installation and added functionality for temporary division. Customization options include perforation, perforation with internal acrylic inserts, above-wall inserts or internal sound-blocking vinyl.

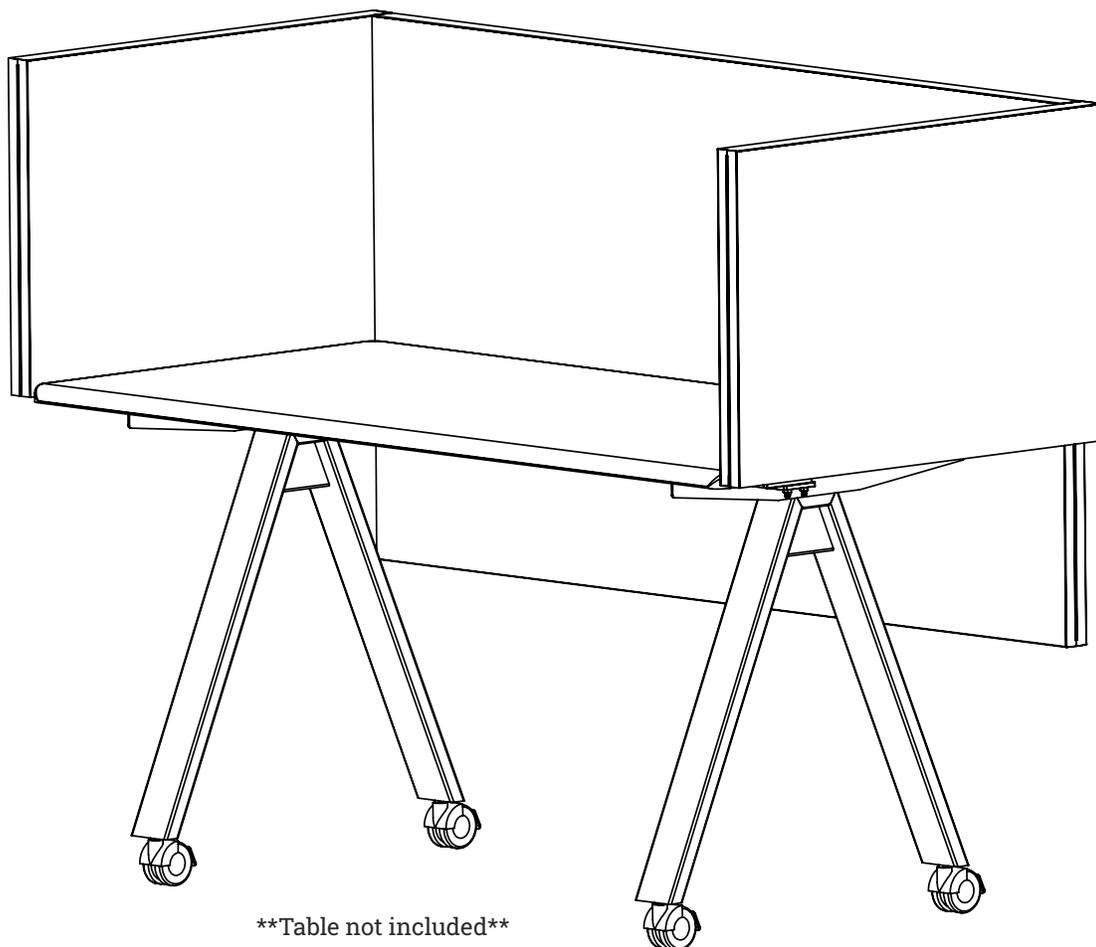

Tools You Will Need



Phillips Screwdriver




Power Drill


DIVI INSTALLATION

SÖFWAL DIVI

Items Included

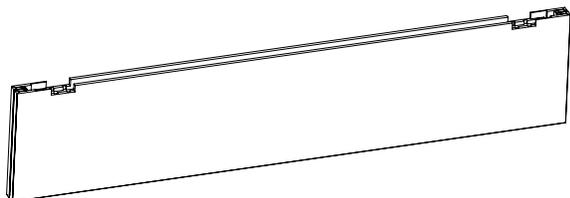


[x1] Modesty Panel

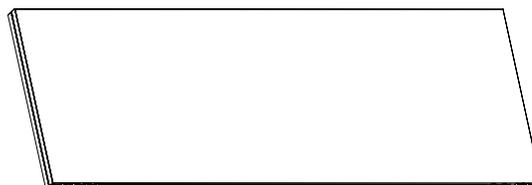


[x1] Privacy Panel




[x1] Left Side Panel

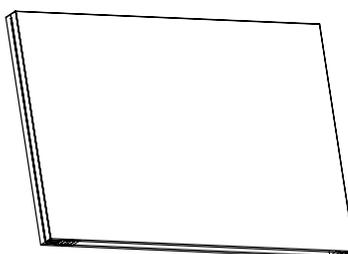


[x1] Right Side Panel

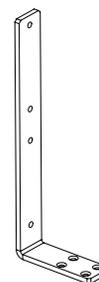


[x6] Panel Mounting Bracket

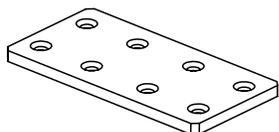


[x4] Surface Mounting Bracket

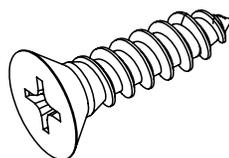


[x16] #10 x .75" Wood Screw

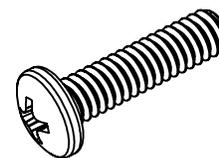


[x8] 1/4"-20 x 1" Phillips Panhead Screw

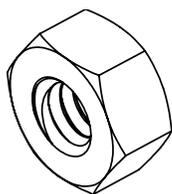

[x8] 1/4-20 Hex Nut

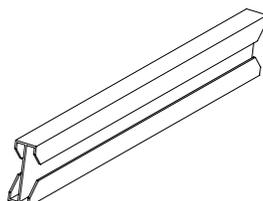

[x2] 2-Way Connector

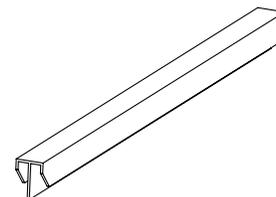


[x2] 1-Way Connector

DIVI INSTALLATION

SÖFWAL DIVI


Step 1: Attach the panel mounting bracket to the surface mounting bracket as shown below to create a LEFT side bracket assembly. Repeat the process with the panel mounting bracket oriented in the opposite direction to complete the RIGHT side assembly.

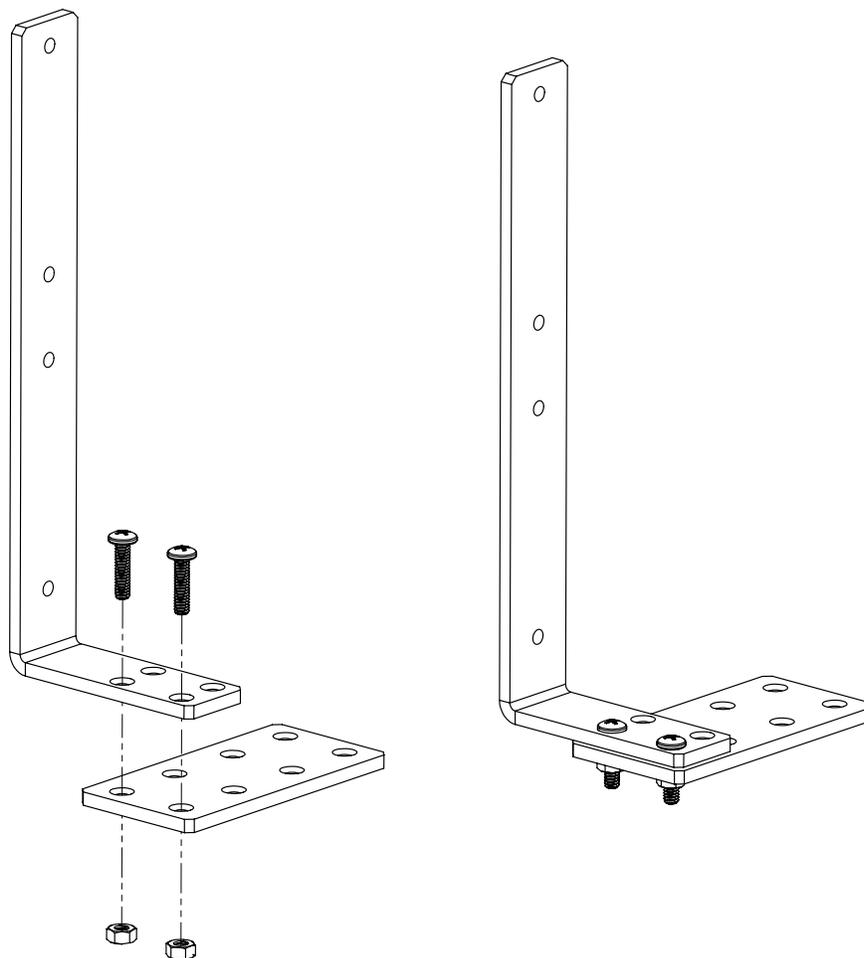


DIVI INSTALLATION

SÖFWAL DIVI

Step 2: Slide the left and right side bracket assemblies into the slots located at the bottom of the privacy panel.

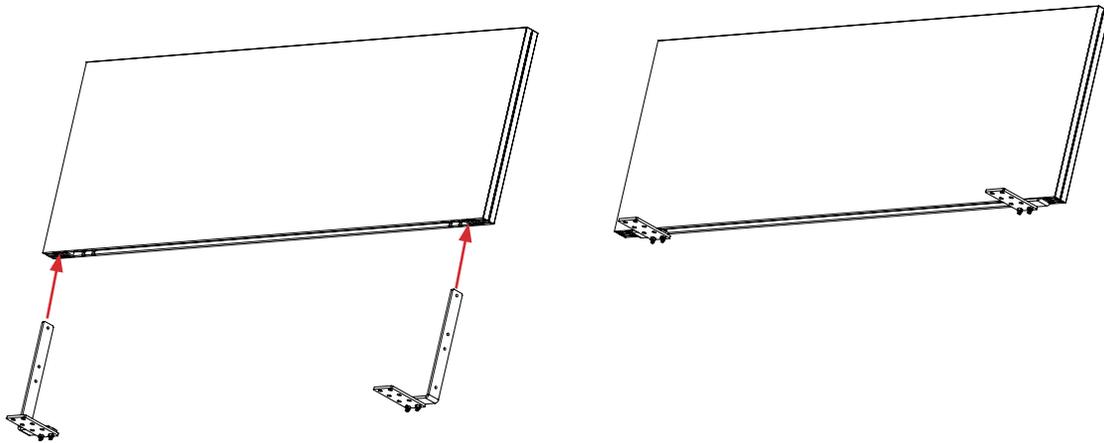


Step 3: Align the panel to your tabletop as shown, and screw into position with [x4] #10 wood screws per surface bracket, as shown. You may refer to the dimensions on page 05 and mount the brackets without using the panel to align, but this is the preferred method.

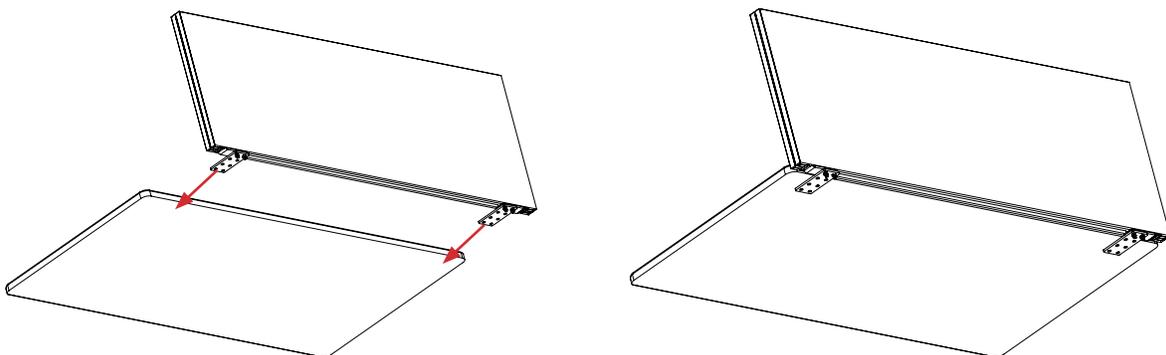


DIVI INSTALLATION

SÖFWAL DIVI

Bracket Location Reference Dimensions

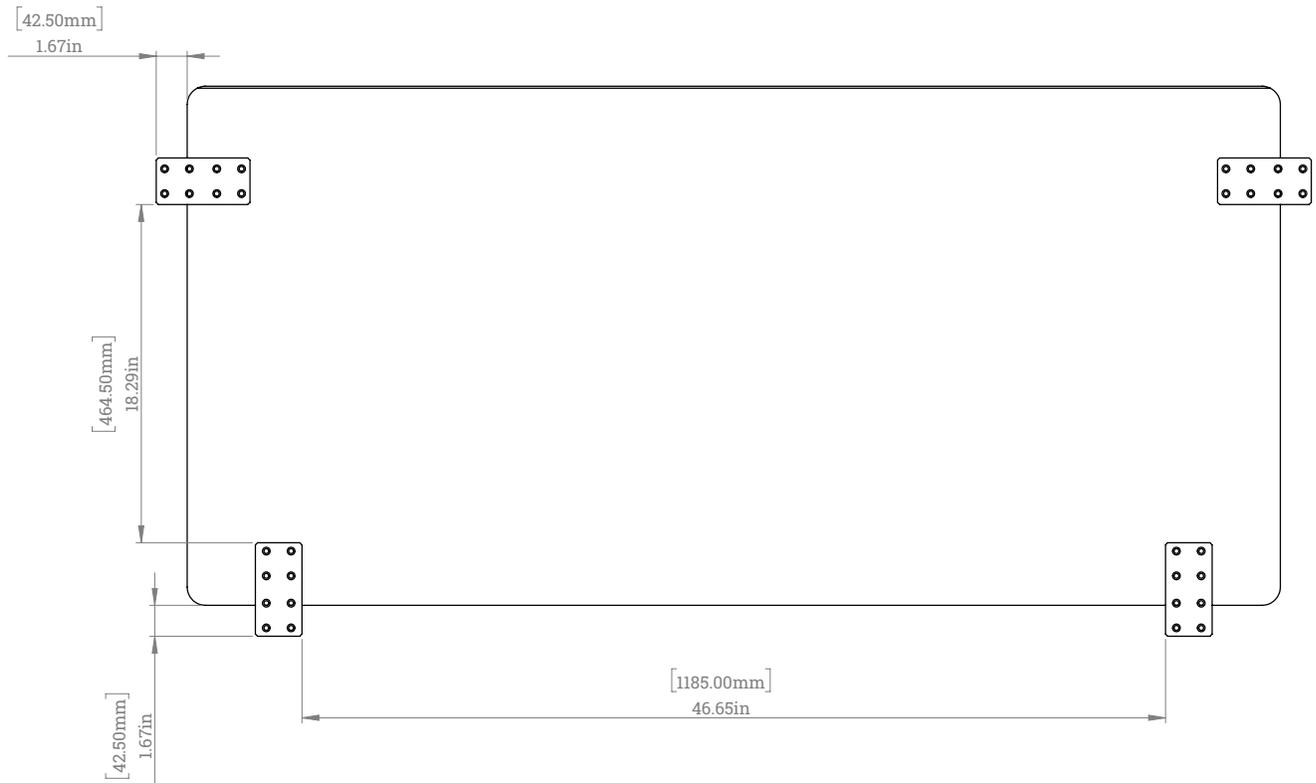


Step 4: Slide both 2-way connectors into the privacy panel, as shown below.

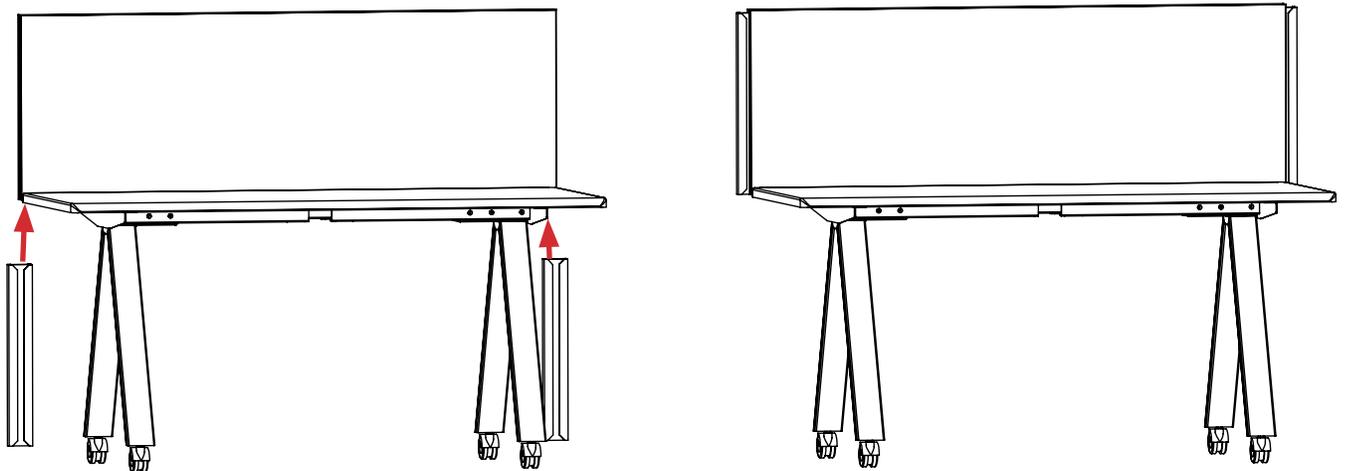


DIVI INSTALLATION

SÖFWAL DIVI

Step 5: Slide [x1] 1-way connector into the side panel in the appropriate slot.

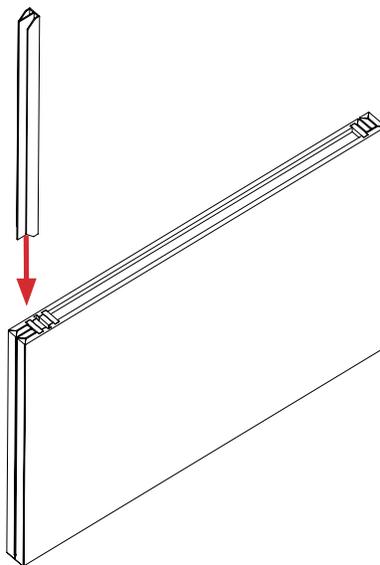


Step 6: Slide [x2] 1-way connectors into the modesty panel on each end.

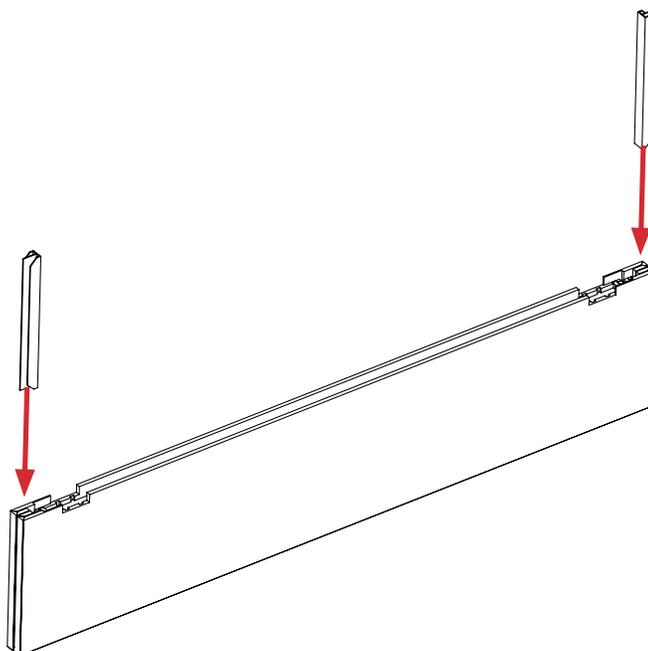


DIVI INSTALLATION

SÖFWAL DIVI

Step 7: Connect the side panel to the 2-way connector on the edge of the privacy panel.

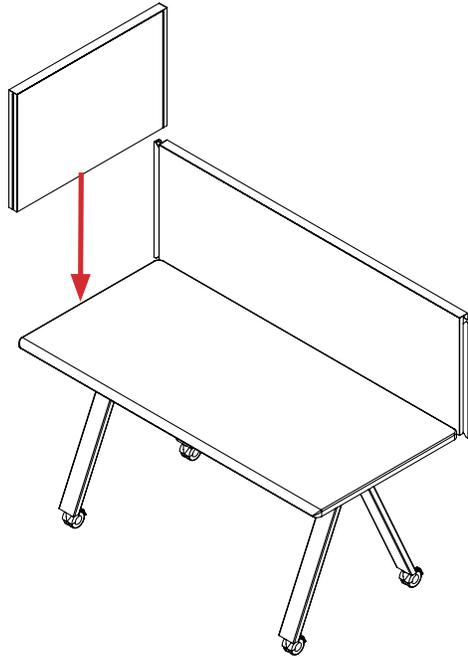


Step 8: Assemble additional bracket assemblies according to step 1, and in the appropriate orientation. Insert the bracket into the channel at the base of the side panel until it sits flush with the bottom of your tabletop.

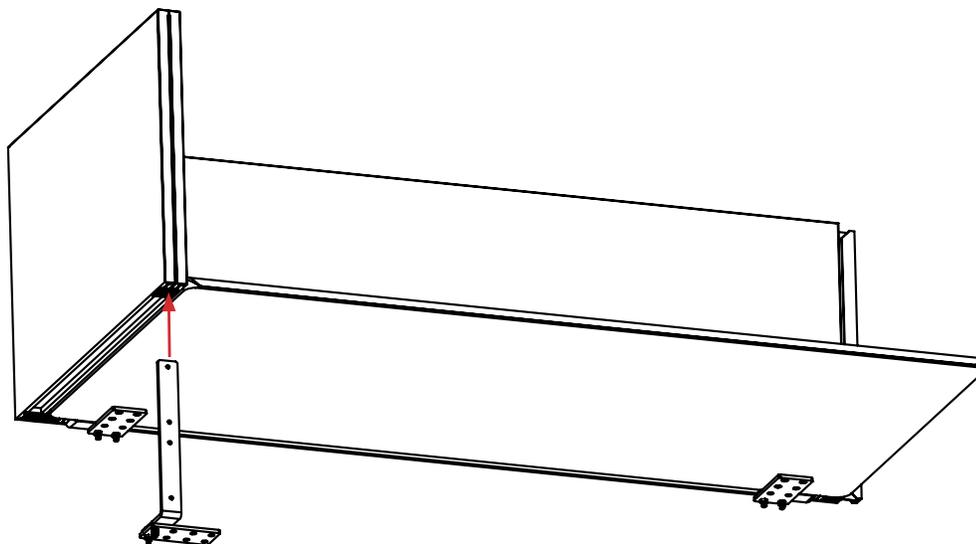


DIVI INSTALLATION

SÖFWAL DIVI

Step 9: Screw the surface bracket into the table. Repeat for right side panel.

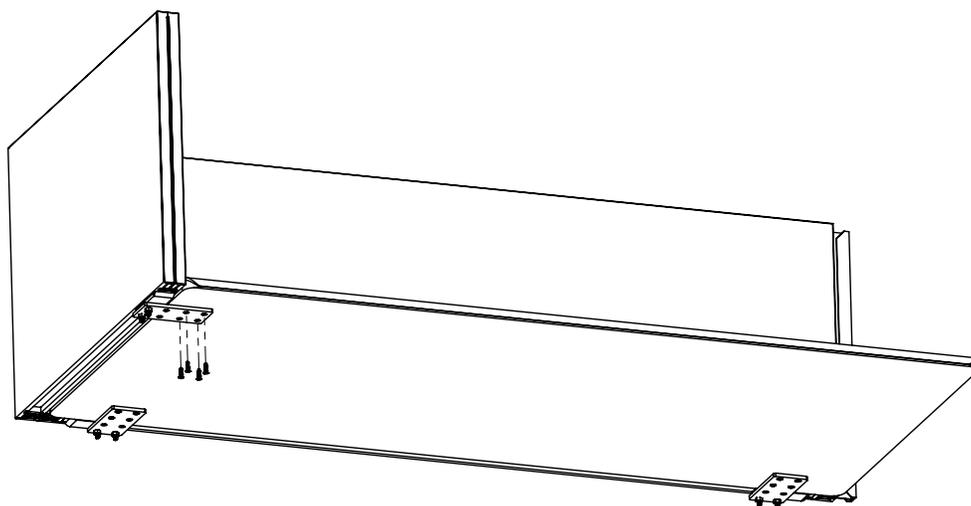


Step 10: Lift the privacy panel up to access the mounting bracket fasteners.

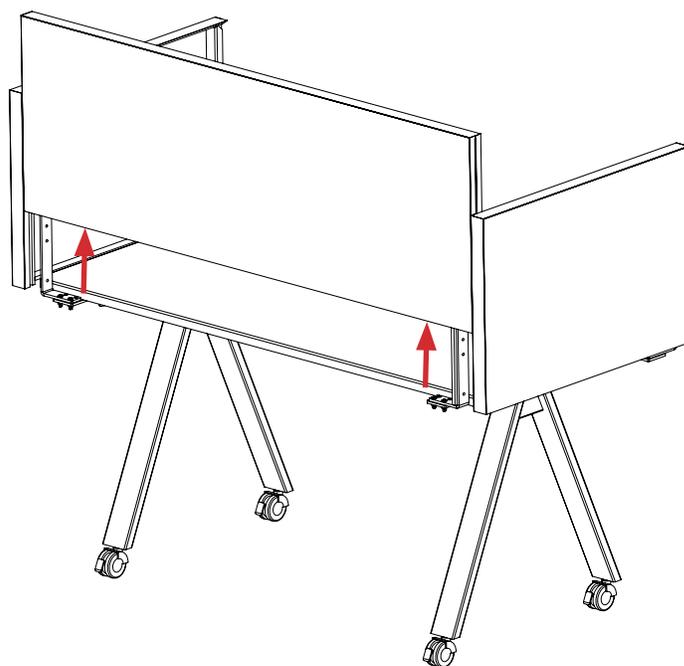



DIVI INSTALLATION

SÖFWAL DIVI

Step 11: Remove the nuts from each bracket assembly, set aside.

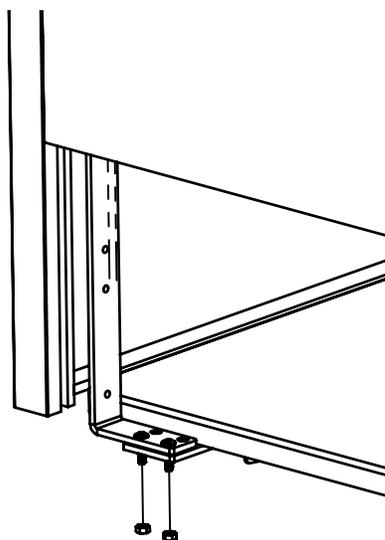



Step 12: Attach x2 additional mounting brackets to the exposed bolts as shown, and replace the nuts.

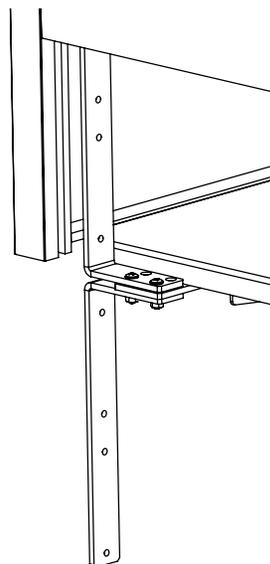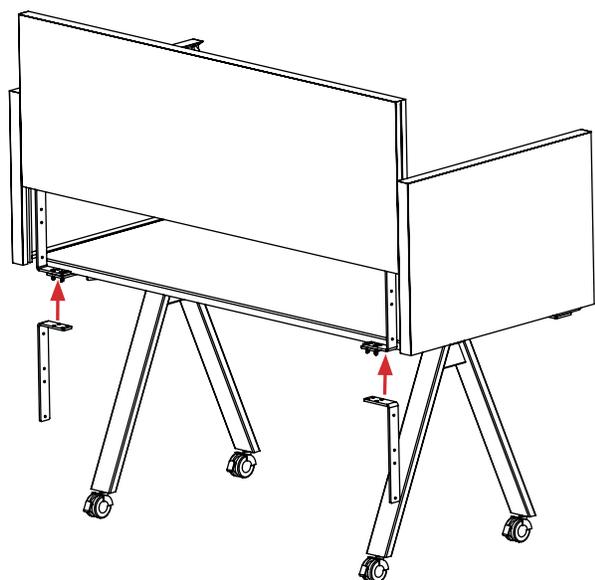

DIVI INSTALLATION

SÖFWAL DIVI

Step 13: Slide the modesty panel over the brackets, and press firmly into place. **Installation complete.**

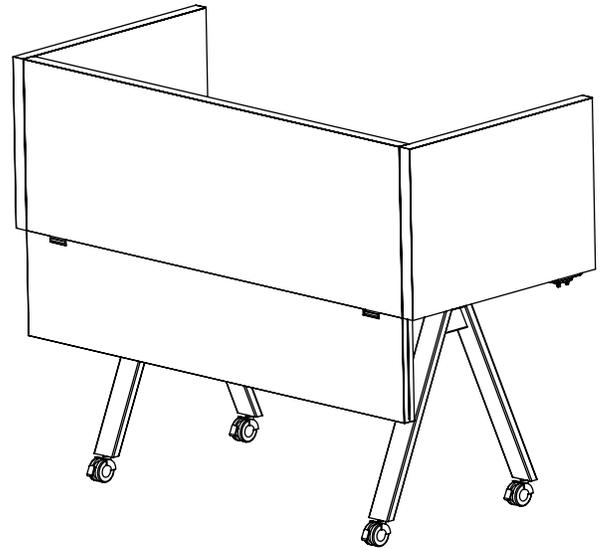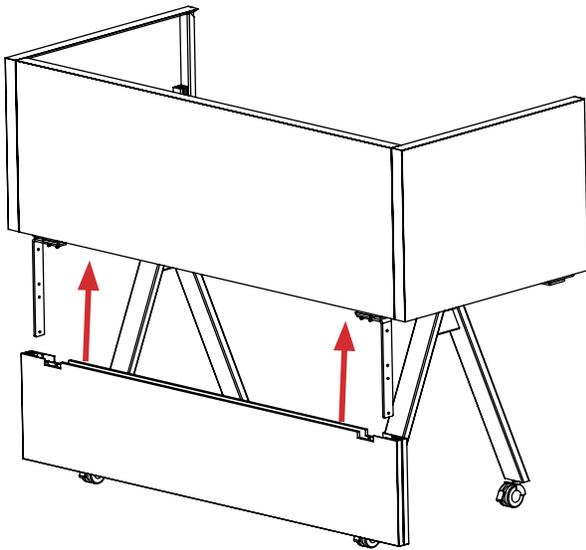


DIVI INSTALLATION

SÖFWAL DIVI

DIVI CUBICLE EXTENDER

Step 1: Install the panel mounting brackets on the cubicle wall with the #10 x 2" wood screw fasteners according to the dimensions below.

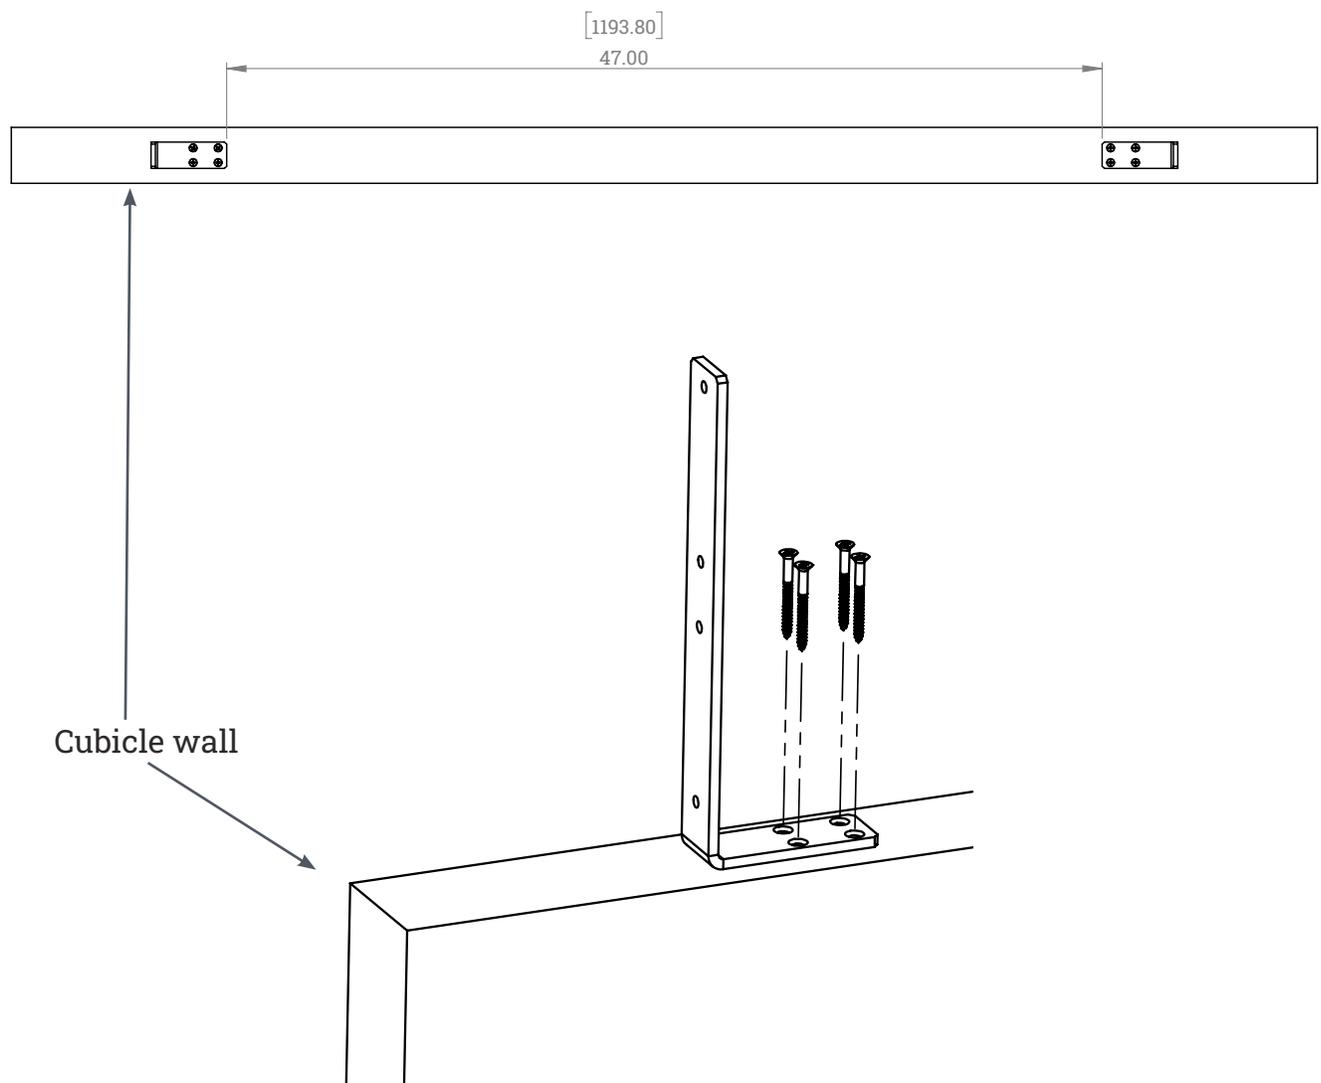

DIVI INSTALLATION

SÖFWAL DIVI

Step 2: Slide the privacy panel over the brackets. **Installation complete.**

